

# POWER CORD INSTALLATION GUIDE

## (RL2000, FT5000<sup>XP</sup>, FT7000)

### NOTE

The Power Cord interface cable is located inside the vault area (Dispenser location) of the cabinet. To gain access and connect the power cord included in the accessory box, you may have to remove the dispenser. Refer to your applicable Installation or Service manual for removal procedures of your dispenser.

1. Obtain the power cord that is located in the accessory box. From the exterior of cabinet, feed the small end of the cable through the closest cable access hole (lower part of cabinet).



2. Connect and route the power cord in the unit as shown in figures below.



FT5000<sup>XP</sup>



RL2000



FT7000

3. Reinstall the dispenser, if applicable.