

# FT7000 HEATER INSTALLATION INSTRUCTIONS

## INTRODUCTION

The heater assembly for the FT7000 is a self contained industrial quality unit. Air is drawn in from the bottom, heated and exits the top. **DO NOT BE TEMPTED TO POSITION THE HEATER IN ANY OTHER MANNER.** It has been preset for 90 degrees F. and **MUST NOT** be changed. If there is evidence of the tamper seal being removed, it **WILL** void any warranty. Ensure the unit remains clear of any obstacles that might hinder air flow, especially the top.

## INSTALLATION INSTRUCTIONS

Unpack the heater from its shipping container. Open the front of the FT7000 cabinet. Place the heater assembly on the shelf in front of the UPS unit. Plug the heater into the **NON-BATTERY, SURGE ONLY** outlet as shown. This outlet will continue to be powered, even if the UPS is turned off. Ty wrap the excess power cord neatly to avoid obstructing the airflow. Ensure all doors and panels are closed on the unit to assure proper heating efficiency.

