

TDM-100/150 DETENT CLIP REPLACEMENT PROCEDURES

PURPOSE

This guide covers the steps for replacing the detent clips in TDM-100/150 dispensers. This procedure includes the tool and hardware necessary for the upgrade as well as the steps involved.

SCOPE

This procedure applies to all service personnel involved in the process of maintaining or converting Triton ATMs.


REQUIRED PARTS AND TOOLS

TOOLS REQUIRED		
#T-20 Torx L-key (included)		
TDM-100/150 DETENT CLIP REPLACEMENT (P/N 06200-08124)		
PARTS SUPPLIED		
PART NUMBER	DESCRIPTION	QUANTITY
03110-01118	Detent Clip, Gray	2
02054-00173	Screw, T20, Self-tapping, Plastite, Washer-head	2
07103-00169	TDM-100/150 Detent Clip Replacement Procedures	1

1. Open the cabinet vault door.



(For fixed tray assemblies) Pull the pin down to release the dispenser swivel mounting platform. Slowly rotate the tray 180° clockwise so that the note and reject cassettes can be accessed from the front (“Service” position). Release the locking pin.

(For slide tray assemblies) Release the locking slide rail and fully extend the dispenser from the cabinet. Slowly rotate the dispenser swivel mounting platform 180° clockwise so the note and reject cassettes can be accessed from the front (“Service” position). Release the locking pin.

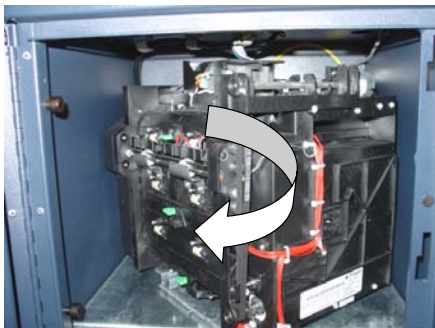


TDM-100/150 DETENT CLIP REPLACEMENT PROCEDURES

2. Remove the note and reject cassettes. Using the #20 Torx L-key provided, remove the screws and detent clips shown.

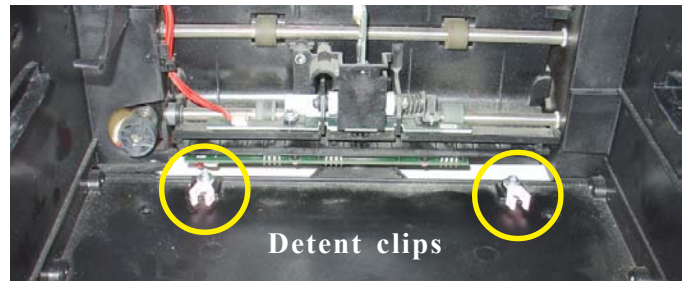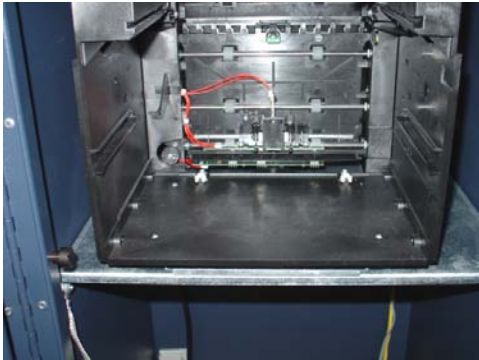

3. Install the provided detent clips (gray) and secure (hand-tighten) with the screws included with the Torx L-key. Note the position of the detent clip when installed (flange facing up on backside).

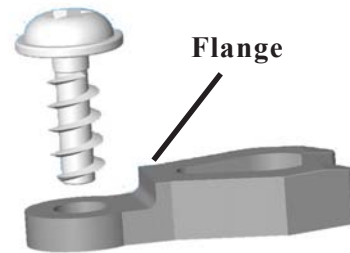

4. Reinstall the note and reject cassettes. You should hear an audible “click” when the note cassette is fully inserted. Rotate the dispenser back counterclockwise to the “Operate” position.