


# NMD-50 SLIDE RAIL STOP INSTALLATION (MODELS 9750/RL5000/9650)

## (Reference Technical Bulletin #05-28)

The following illustrations show the installation of the slide catch bracket to the dispenser slide rail. Tool required is a #2 flat-tip screwdriver. Installation time approximately less than 5 minutes. See table below to determine which type and placement for the catch bracket.

NMD-50 Slide Stop Kit (Model / Placement)		
Model / Cabinet	Kit #	Placement
9750 (Business Hours)	06200-00122	Right side
9770 (Level 1)	06200-00123	Left side
RL5115 (Business Hours / T-Handle)	06200-00122	Right side
RL5115 (Business Hours / Lift -Handle)	06200-00123	Right side
RL5125 (Level 1)	06200-00123	Left side
9650 (Business Hours)	06200-00122	Right side
9670 (Level 1)	06200-00123	Left side

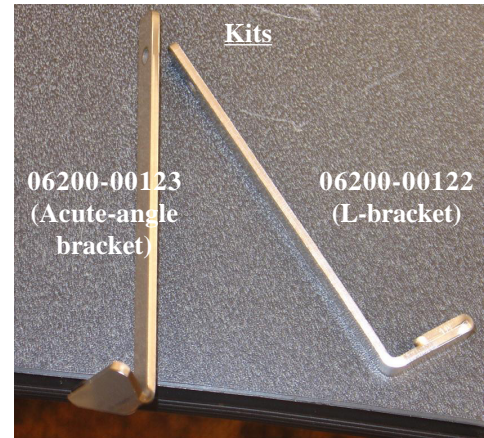

### Step 1

Fully extend mechanism. Remove screw shown from **Right** or **Left** side rail (see table). Retain screw.




### Step 3

Secure bracket with screw previously removed.



### Step 2

Slide catch bracket through slot on front of rail (L-shaped or angle end pointing **out**).

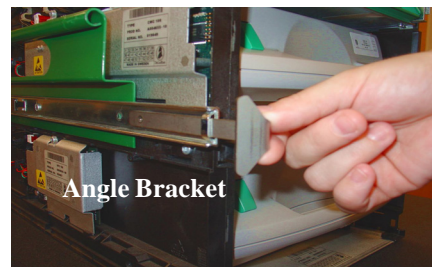

### Step 4

Slide mechanism back in cabinet.

