


NMD-50 SLIDE RAIL STOP INSTALLATION

The following illustrations show the installation of the slide catch bracket to the dispenser slide rail. Tool required is a #2 flat-tip screwdriver, #2 Philips screwdriver, or a Torx T20 driver. Installation time approximately less than 5 minutes. See below to determine which type and placement for the catch bracket. Only one slide stop is required. Remove the stop that is not applicable to your unit.

Kit Usage:

06200-00122 9650, 9750, RL5115
Cabinets built before November 2004
Install on the right

06200-00123 RL51 & RL53
Cabinets built between November 2004 and August 2009
Install on the left

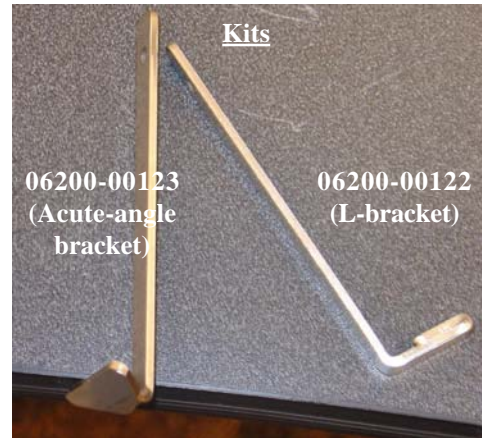

Step 1

Fully extend mechanism. Remove screw shown from **Right** or **Left** side rail (see table). Retain screw.




Step 3

Secure bracket with screw previously removed.



Step 2

Slide catch bracket through slot on front of rail (L-shaped or angle end pointing **out**).

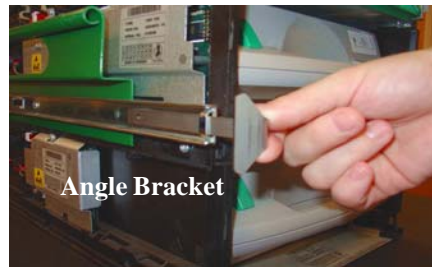

Step 4

Slide mechanism back in cabinet.

